


AVR DUO ICE Firmware Upgrade

1. Disconnect the AVR DUO ICE from your computer and target board.
2. Slide the function switch to the “UPGD” (right) position.

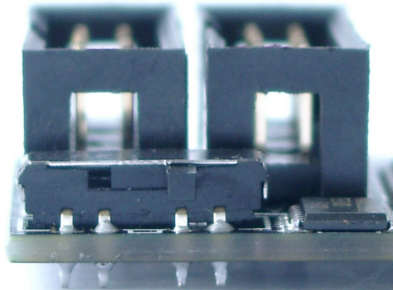

3. Plug the AVR DUO ICE to your computer.
4. Run the AVRprog application program.

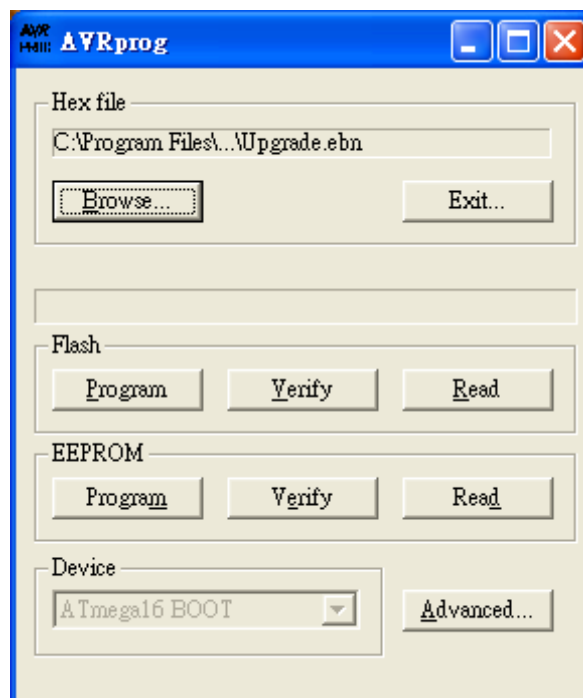


Figure 2: Run the AVRprog application to perform the firmware upgrade

5. Press the “Browse” button to select the new firmware file.
6. Press the “Program” button to start burning the code to the internal FLASH memory.
7. Disconnect the AVR DUO ICE and reconnect it to use the new firmware.